


## ASSEMBLY DRAWING

MODEL #:6BGW


### LEAVE ALL BOLTS LOOSE UNTIL ALL ARE IN PLACE.

1. BOLT THE LEGS TOGETHER AS SHOWN WITH THE BRACE BETWEEN THE LEGS, (BENT END AWAY FROM THE LEG) AND THE TOP ANGLE FACING THE SAME WAY.
2. LAY THREE PLANKS ON THE GROUND CLOSE TOGETHER (GOOD SIDE DOWN). TIP THEM ON THEIR SIDE, ONE AT A TIME AND INSERT THE 2 1/4" CARR. BOLTS THROUGH THE HOLES. (HEAD ON GOOD SIDE OF WOOD) ALSO PUT A CARR. BOLT IN THE BRACE HOLE ON THE CENTER PLANK.  
6' TABLE GETS A 2 1/2" BOLT AND AN 8' TABLE GETS (2) 2 1/4" BOLTS.
3. PLACE A SET OF LEGS UPSIDE DOWN, LINING UP THE HOLES WITH THE BOLTS. REPEAT FOR OTHER END OF THE TABLE. BE SURE TOP ANGLES FACE TOWARD THE CENTER. ATTACH BRACES AT THIS TIME ALSO.
4. TURN THE TABLE OVER & ATTACH SEAT PLANKS W/ 4" CARR. BOLTS.

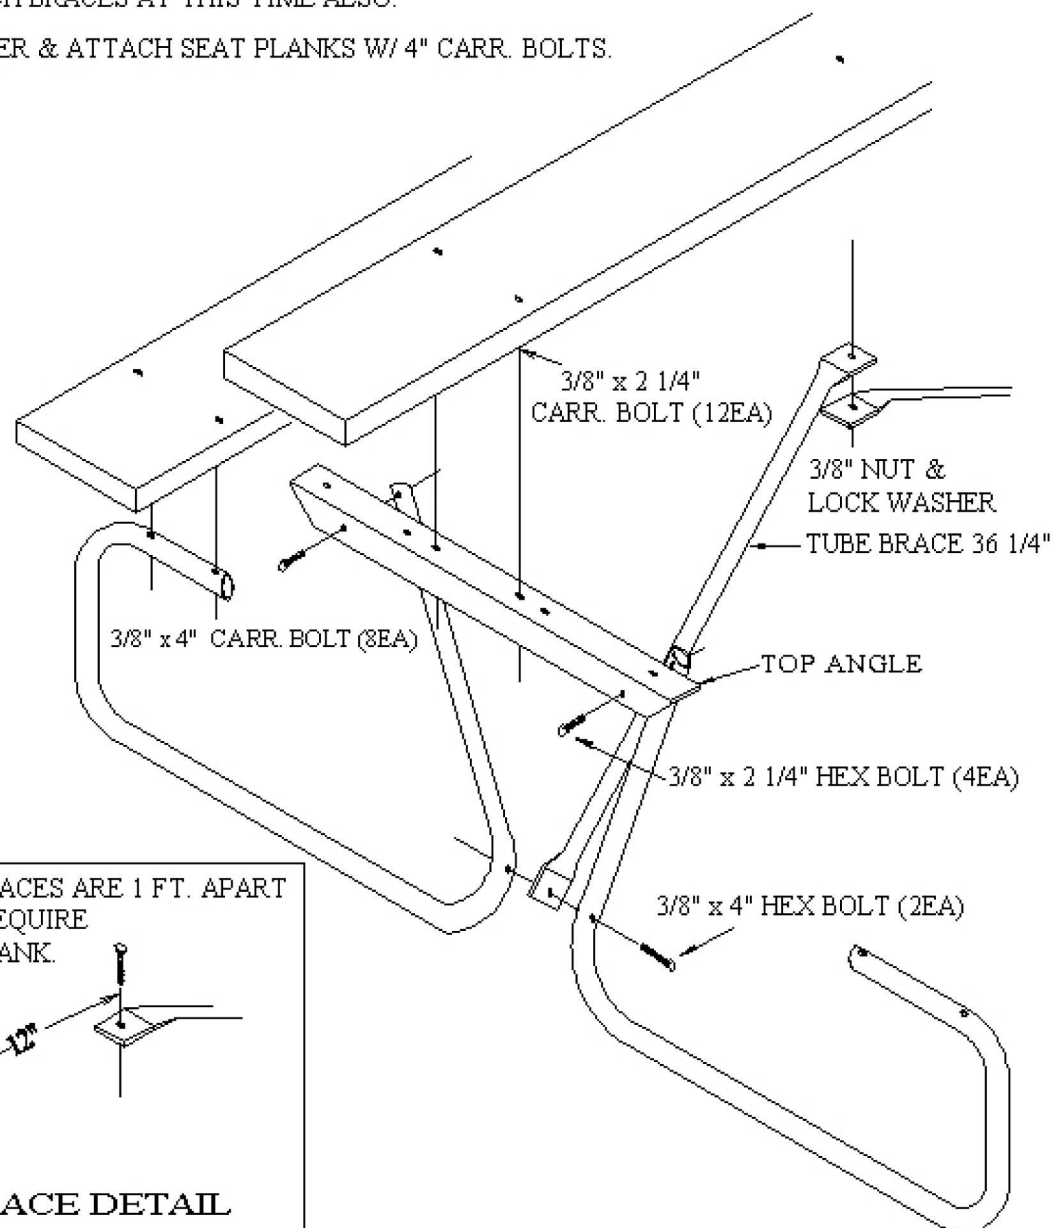

ON AN 8' TABLE THE BRACES ARE 1 FT. APART AT THE CENTER AND REQUIRE A SIX HOLE CENTER PLANK.

3/8" x 2 1/4" CARRIAGE BOLT

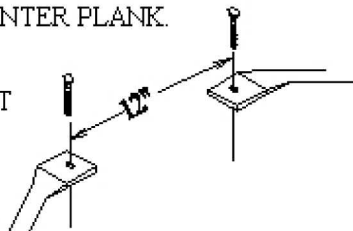

8' TABLE BRACE DETAIL

**FURNITURE LEISURE INC**

1.800.213.2401 | SALES@FURNITURELEISURE.COM

FurnitureLeisure.com  
PicnicFurniture.com  
ParkTables.com

PoolFurnitureSupply.com  
PicnicTableSupplier.com  
UBrace.com