

# FURNITURE LEISURE INC


1.800.213.2401 | SALES@FURNITURELEISURE.COM

FurnitureLeisure.com  
PicnicFurniture.com  
ParkTables.com

PoolFurnitureSupply.com  
PicnicTableSupplier.com  
UBrace.com

1. PUT THE 2 1/4" CARRAIGE BOLTS IN THE BOARDS W/7 HOLES. (NOTE: THE 3" CARR BOLTS GO IN THE MIDDLE BOARD). PLACE THEM WITH THE HEAD ON THE ROUTERED SIDE OF THE LUMBER. LAY THE BOARDS DOWN, SIDE BY SIDE, APPROX. 3/8" APART, W/ THE THREADS OF THE BOLT SHOWING. (REINFORFING BARS WILL FACE UP WHEN USING RECYCLED PLASTIC PLANKS.)
2. SET THE LEFT SIDE FRAME UPSIDE DOWN MATCHING THE HOLES TO THE BOLTS. PLACE LOCKWASHERS & NUTS ON BOLTS. (DO NOT FULLY TIGHTEN YET) REPEAT THIS FOR THE OTHER END OF THE TABLE. BE SURE FRAMES FACE AS SHOWN.
3. HOLD THE 6' PLANK UP TO THE SEAT BRACKETS WITH THE GOOD SIDE DOWN. ATTACH FINGER TIGHT W/ 2 1/4" CARR. BOLT, LOCKWASHER, & NUT IN EACH HOLE. YOU MAY NEED ANOTHER PERSON'S HELP HERE.
4. NOW PLACE THE (3) CHANNEL BARS ON THE BOLTS AT THE PLACES SHOWN BELOW. THE BRACES WILL NOW ATTACH FROM THE LEGS TO THE CHANNELS. YOU MAY NOW TIGHTEN BOLTS AND TURN TABLE OVER.
5. LINE UP THE (2) SEAT SUPPORT PLATES & 16" BOARDS AS SHOWN BELOW. MAKE SURE THE COPED END OF THE SEAT SUPPORT PLATE IS TO THE OUTSIDE OF THE LEGS. TIGHTEN BOLTS.

TOP VIEW OF LEFT HAND 16" SEAT PLANK

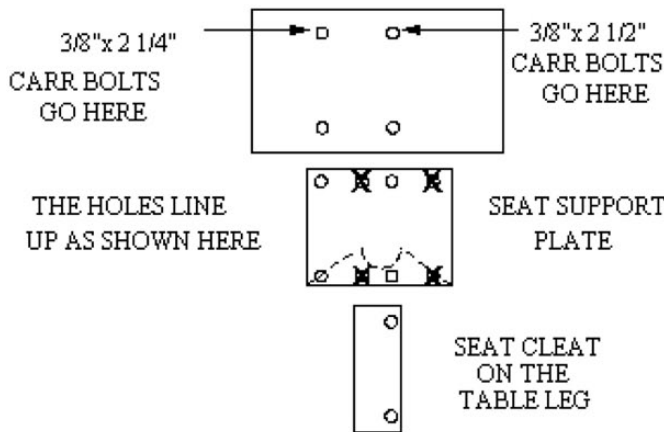

TOP VIEW OF RIGHT HAND 16" SEAT PLANK

