


SBD24 - South Beach [40 lbs] Counter Height

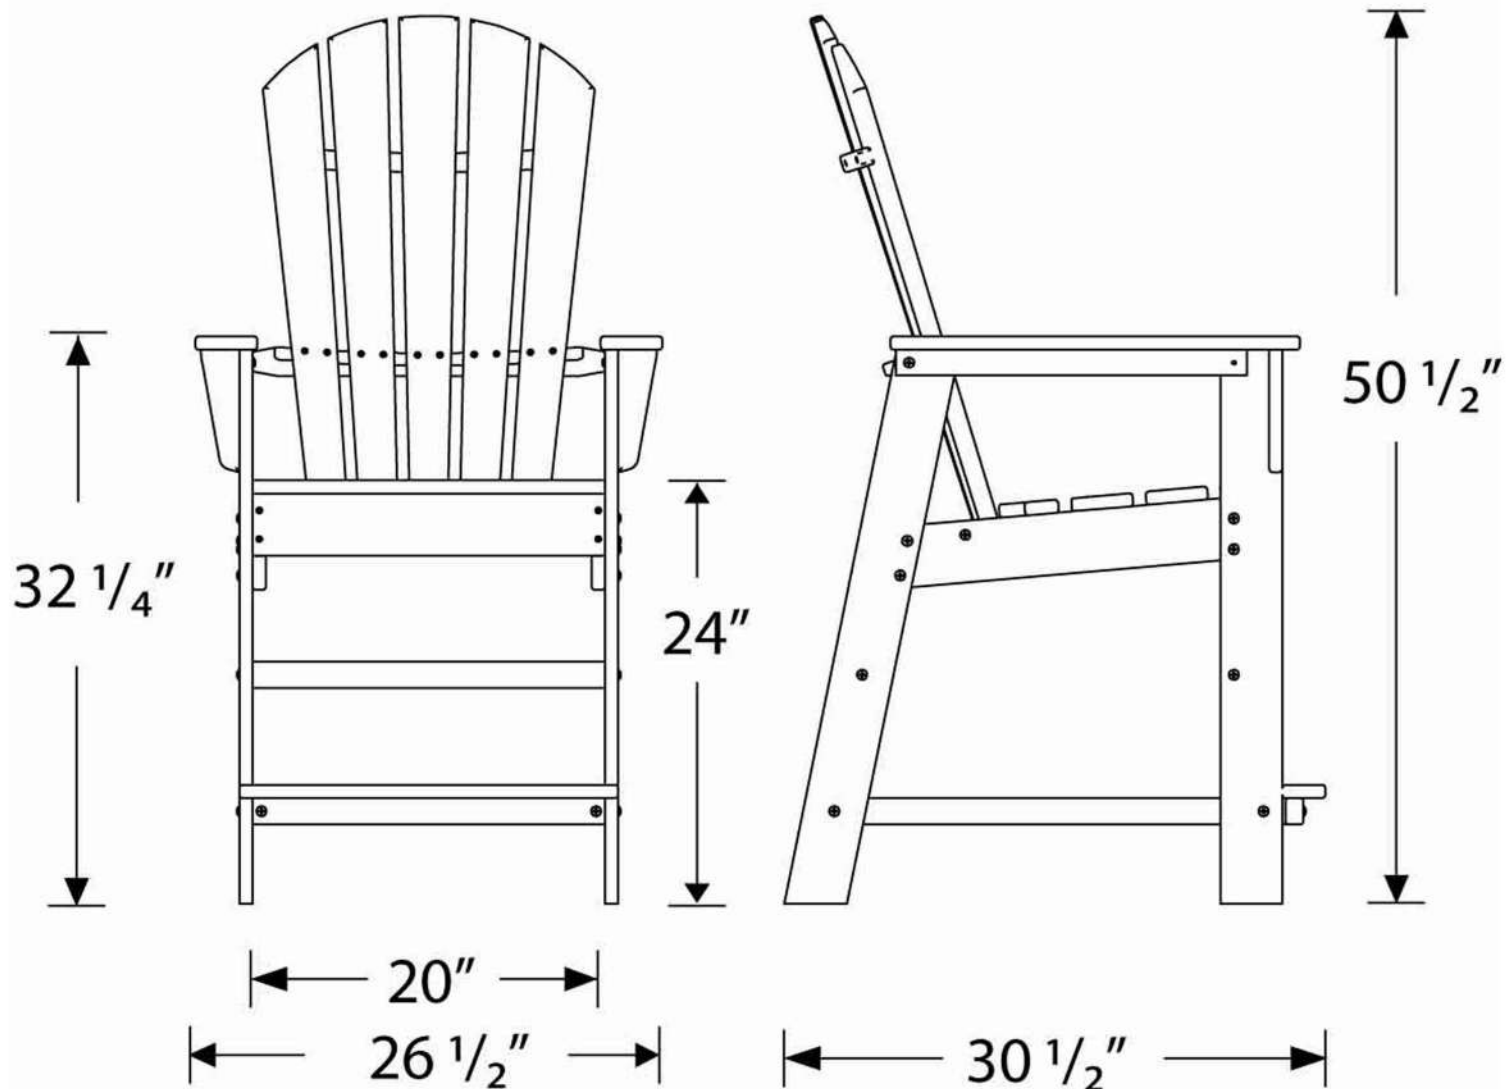



Intelligent Design™

Model: SBD24

- (1) Seat
- (1) Back
- (2) Front legs
- (2) Back legs
- (2) Arms
- (1) Footrest
- (1) Short brace
- (2) Side brace
- (2) Braces
- (1) Hardware pack

TOOLS NEEDED




7/16 Wrench
4mm HEX KEY, ALLEN, T-HANDLE
(INCLUDED)

Qty.	Description
8	A-.27 X 2 SOCKET WAFER A
4	B-.27 X 3 SOCKET WAFER A
8	C-1/4-20 X 1-7/8 WAFER SHCS
4	D-1/4-20 X 2-1/4 WAFER SHCS
12	E-1/4 FLAT WASHER
12	F-1/4-20 NYLOCK NUT

Step 1


Lay seat on its side.
Attach front leg and back leg
to seat. Flip seat around and
do the other side. Uses (8) 1-7/8" bolts,
nuts and washer

wings face
forward

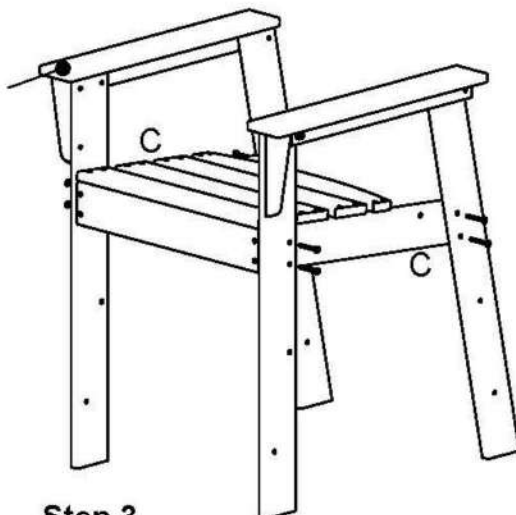

Step 2


Attach arms to front leg using
(2) 2-1/4" bolts, nuts and washer
Attach braces to legs using
(4) .27x2" screws

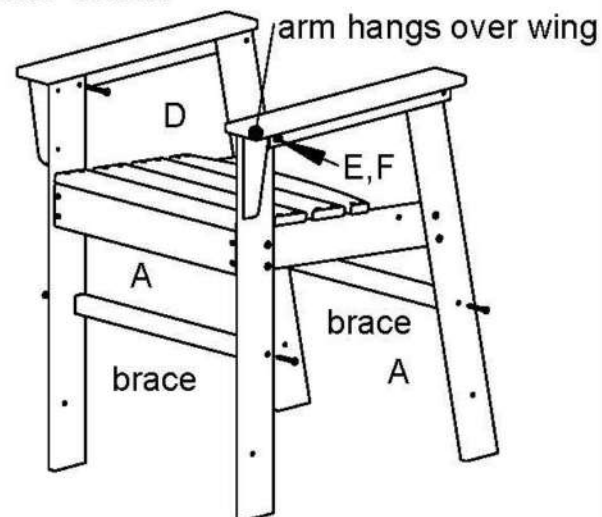

Step 3

Attach back to seat
using (2) .27x2" screws

Attach back to rear leg
using (2) .27x3" screws

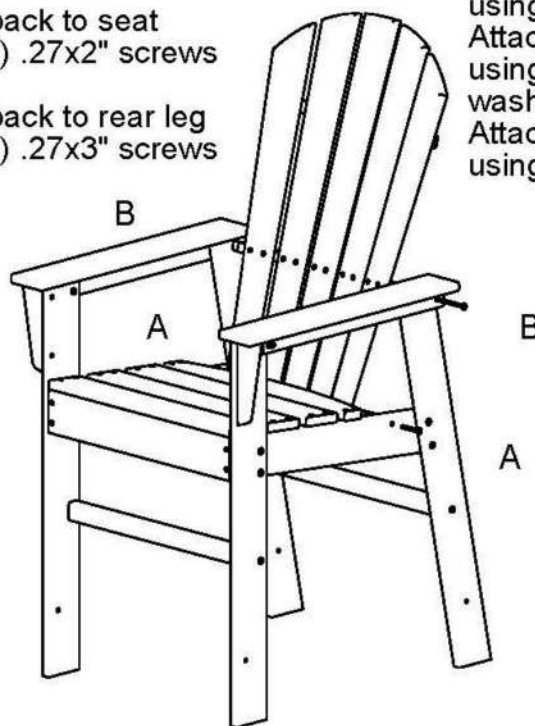

Step 4

Attach footrest to side braces
using (2) .27x2" screws

Attach sidebrace to front legs
using (2) 2-1/4" bolt, nut and
washer

Attach short brace to sidebrace
using (2) .27x3" screws

