
## **Sequoia Professional**

# **Springville Dining Chair**


**Assembly Guide** 


#### **IMPORTANT!**


<u>DO NOT fully tighten the bolts</u> until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.

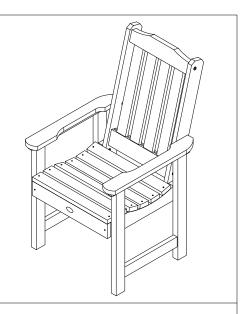


### **HARDWARE INCLUDED**








#### **TOOLS INCLUDED**



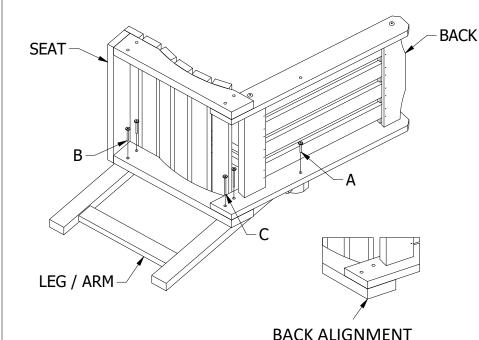

- 1) Attach Seat to Leg/Arm using (2) B bolts and (2) C bolts. (Align Back as shown for C bolts)
- 2) Attach Back to Leg/Arm using (1) A bolt
- 3) Repeat on other Side.