
FURNITURE LEISURE INC 1.800.213.2401

www.FurnitureLeisure.com www.PicnicFurniture.com www.ParkTables.com www.PoolFurnitureSupply.com www.PicnicTableSupplier.com www.UBrace.com

B6RCINNVP


6' RC INNV STYLE BENCH PORTABLE DESIGN

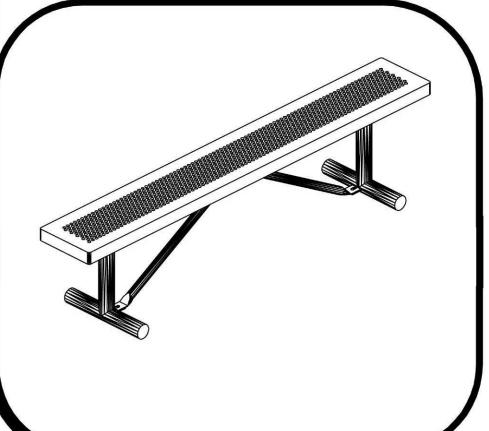


Please take the time to locate and identify each part. Assemble the units on a smooth flat surface. It is also helpful to lay the tops and seats on cardboard or a drop cloth to prevent scratching of the surface during assembly. All parts have been pre-cut and pre-drilled for ease of assembly. All holes are slotted to allow for easy assembly and for final levelling of tops and seats to frames. Fully assemble all parts without totally tightening nuts and bolts. After all assembled go back and retighten nuts to bolts. DO NOT OVER TIGHTEN NUTS TO BOLTS. Over tightened nuts can crack the plastisol coating. All the necessary quantities of parts required are listed in this assembly instructions.

DO NOT BEGIN ASSEMBLY UNTIL YOU HAVE READ THESE INSTRUCTIONS AND ARE FAMILIAR WITH THE PARTS.

PARTS IDENTIFICATION

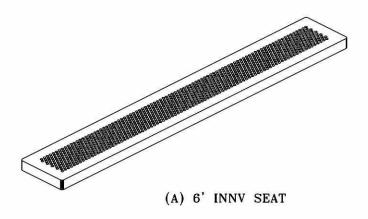

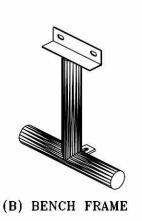



HARDWARE

IDENTIFICATION

PARTS LIST

ITEM	PART#
A	S6RCINNV

FBP В D6

DESCRIPTION

6' RC INNV SEAT BENCH FRAME DIAGONAL

QTY.

ITEM HARDWARE DESCRIPTION

5/16" X 18 NYL LOCKNUTS 5/16" X 18GA CAP BOLTS 5/16" FLAT WASHERS BOLT GUARDS HW1 HW2 HW3 HW4

1 2 2

QTY.

77 14 7

(HW1) 5/16" X 18 NYL LOCKNUTS

(HW2) 5/16" X 18 GAUGE CAP BOLTS



(HW3) 5/16" FLAT WASHERS



(HW4) BOLT GUARDS

ASSEMBLY TOOLS REQUIRED

2- 1/2" WRENCHES

ASSEMBLY PROCEDURES

STEP 1


MOUNT THE FRAMES TO THE SEATS, THE ANGLE IRONS ON THE FRAMES MUST BE BOLTED TO THE OUTSIDE OF THE BRACES ON THE SEAT. FASTEN BY MEANS OF FOUR 5/16" X 1 1/2" HEXBOLT, EIGHT 5/16" FLAT WASHERS, AND FOUR 5/16" NYLOCK NUTS. Hand tighten only at this time.


STEP 2

MOUNT THE SET OF DIAGONALS TO THE HOLE ON THE CENTER BRACE OF THE SEAT. MOUNT THE OTHER END OF THE DIAGONALS TO THE TAB ON EACH END OF THE FRAMES. THE DIAGONALS ARE FASTENED TOGETHER BY MEANS OF THREE 5/16" X 1 1/2" HEXBOLTS, SIX 5/16" FLAT WASHERS, AND THREE 5/16" NYLOCK NUTS.

STEP 3

TIGHTEN ALL NUTS ON ALL BOLTS AND PLACE THE BOLT GUARDS ON ALL NUTS. <u>DO NOT</u> OVER TIGHTEN THE NUTS AS THIS COULD CAUSE THE PLASTISOL COATING TO CRACK.

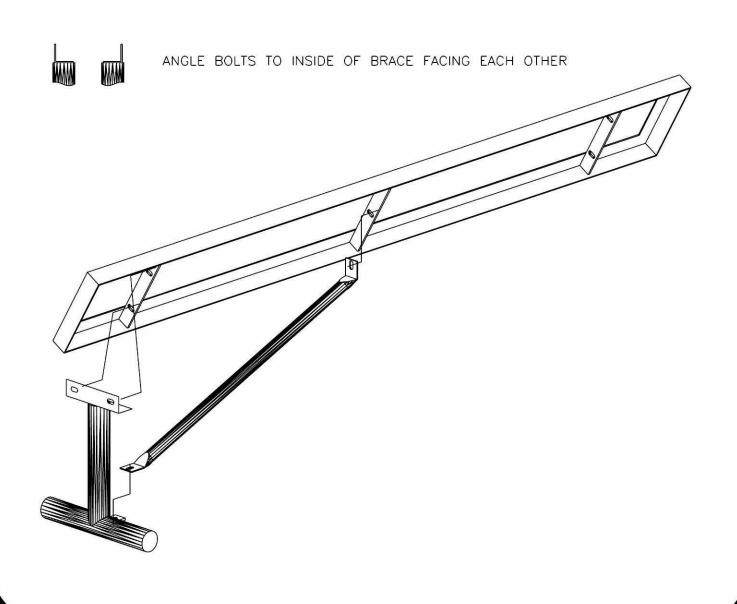

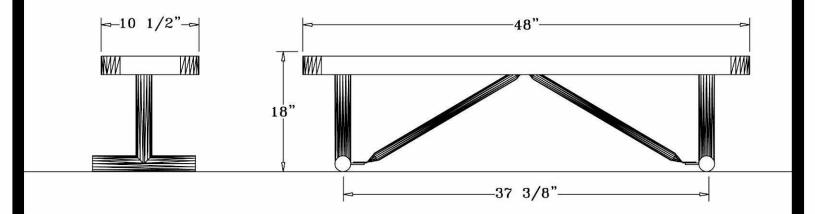

SPECIFICATIONS

6' POLY VINYL COATED STEEL BENCH. THE FRAME IS PORTABLE DESIGN.

COATED WITH A 1/8" TO 1/4" THICK PLASTISOL ULTRAVIOLET STABILIZED VINYL COATING FUSED AND BAKED TO A 90% GLOSS.

SEAT HEIGHT IS 18" APPROXIMATELY. TOTAL OVERALL DIMENSIONS ARE 72" X 15 3/8".

SEATS ARE MADE FROM 10GA 1/2" X 9/16" PUNCHED STEEL. ALL CENTER BRACES ARE MADE FROM 1/4" X 1 1/2" FLAT STEEL.

FRAMES ARE MADE OF 2 3/8" HEAVY GALVANIZED STEEL TUBING THAT IS GALVANIZED INSIDE AND OUT AND MEETS OR EXCEEDS THE YIELD AND TENSILE OF SCH 40 PIPE. CONSTRUCTED SO AS TO PROHIBIT RAIN WATER FROM COLLECTING AT GROUND LEVEL. COATED WITH A BAKED ON POLYESTER POWDER COAT FINISH.

CROSS DIAGONALS SHALL BE OF 1" GALV. STEEL TUBING.

ALL HARDWARE IS NON-CORROSIVE. WEIGHT FOR THE B6INNVP IS 74 LBS.

MAINTENANCE

To maintain luster it is recommended to wash, rinse, and dry the units after prolonged use. Check for loose bolts and nuts and tighten as needed. Contact the factory for genuine Webcoat part replacements if needed.