

POLYWOOD®

Model: ADBN-1

Step1

Intelligent Design™

Attach the seat to the sideframes using
(6) 1½" bolts - Do not tighten bolts yet

Step 2

Attach the back assembly *bottom* to the seat
using (2) 1½" bolts

Then attach the back assembly *top*
to the sideframes using (2) ¾" bolts

Step 3

Attach the back assembly to the
seat support using (1) 2½" bolt

* Tighten all bolts at this time


- (2) Sideframes
- (1) Seat
- (1) Back
- (1) Hardware pack

TOOLS NEEDED:



Phillips head screw driver or
4MM HEX KEY, ALLEN, T-HANDLE
(Included)

Qty.	Description
8	A - 1/4-20 X 1-1/2 WAFER SHCS
1	B - 1/4-20 X 2-1/2 WAFER SHCS
2	C - 1/4-20 X 3-1/4 WAFER SHCS

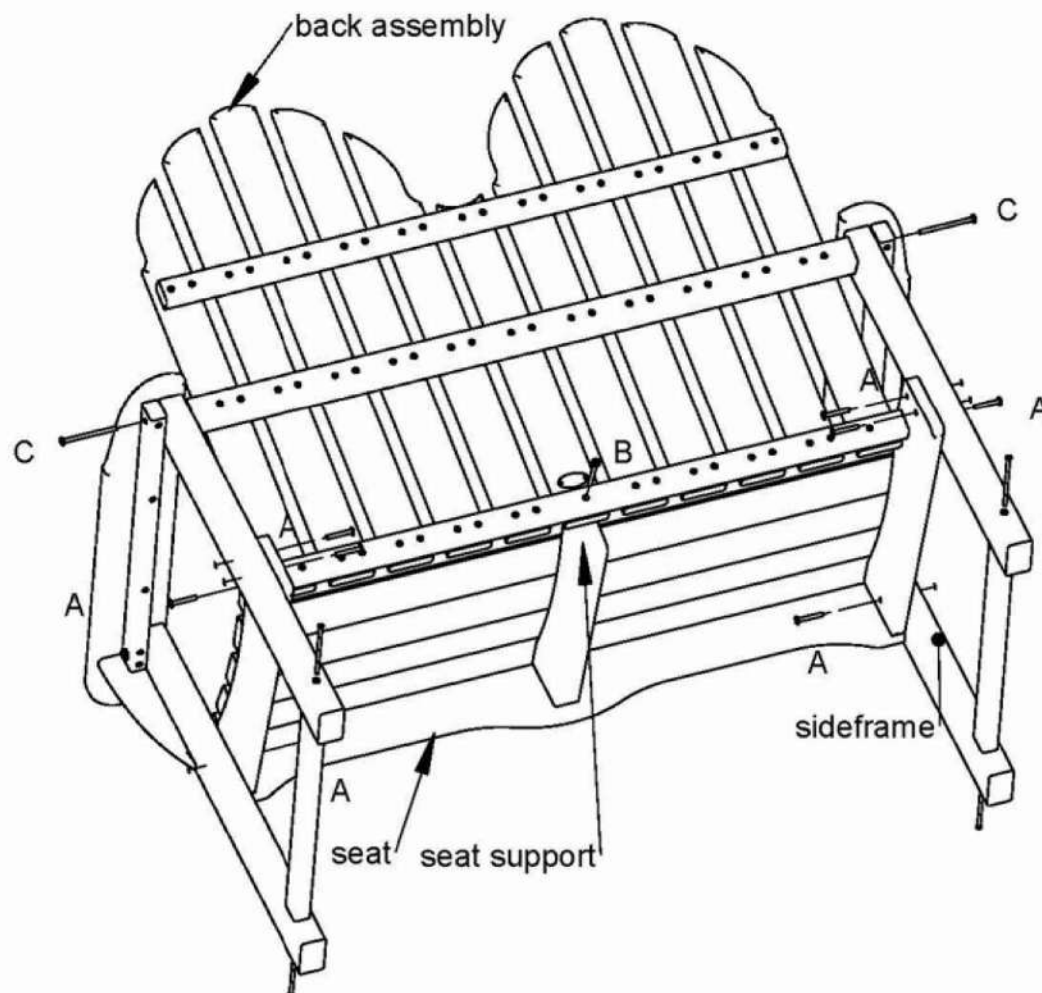

ADBN-1 [63 lbs] - Adirondack Bench

