

POLYWOOD®

Intelligent Design™

Model: ECR16

- (1) Seat
- (1) Back
- (2) Front legs
- (2) Back legs
- (2) Arms
- (2) Braces
- (2) Rockers
- (1) Hardware pack

TOOLS NEEDED




7/16 Wrench
4mm HEX KEY, ALLEN, T-HANDLE
(INCLUDED)

Step 1

Lay seat on its side.
Attach front leg and back leg
to seat. Now flip seat around and
do the other side. Uses (6) 1-7/8" bolts,
nuts and washer


Wings face
forward

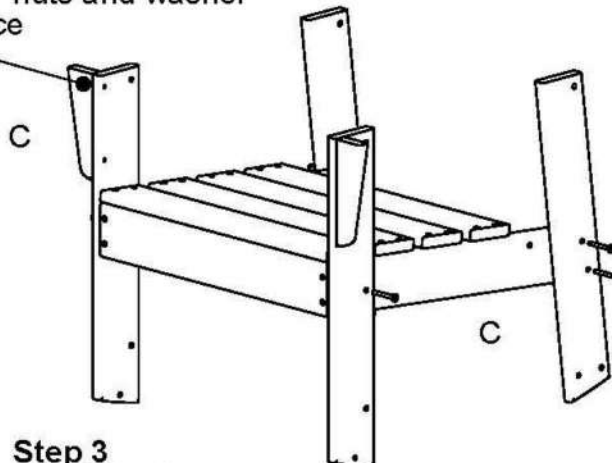

Step 3


Attach back to seat
using (2) 2" screws

Attach back to rear leg
using (2) 3" screws

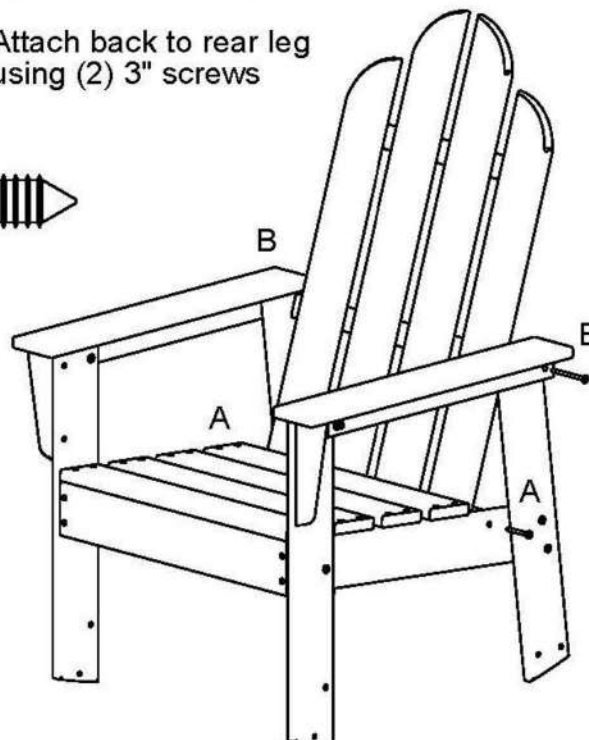

Step 2

Attach arms to front leg using
(2) 2-1/4" bolts, nuts and washer

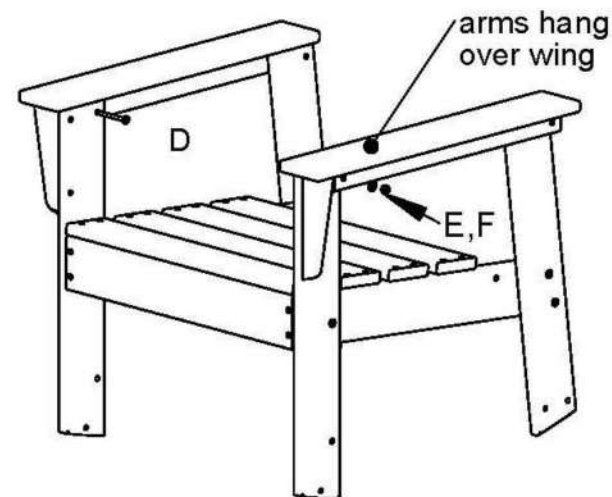


Step 4

Attach rockers to legs
using (4) 1-7/8" bolts, nuts
and washer

Attach brace to front leg
using (2) 2" screws

Attach brace to rear leg
using (2) 3" screws

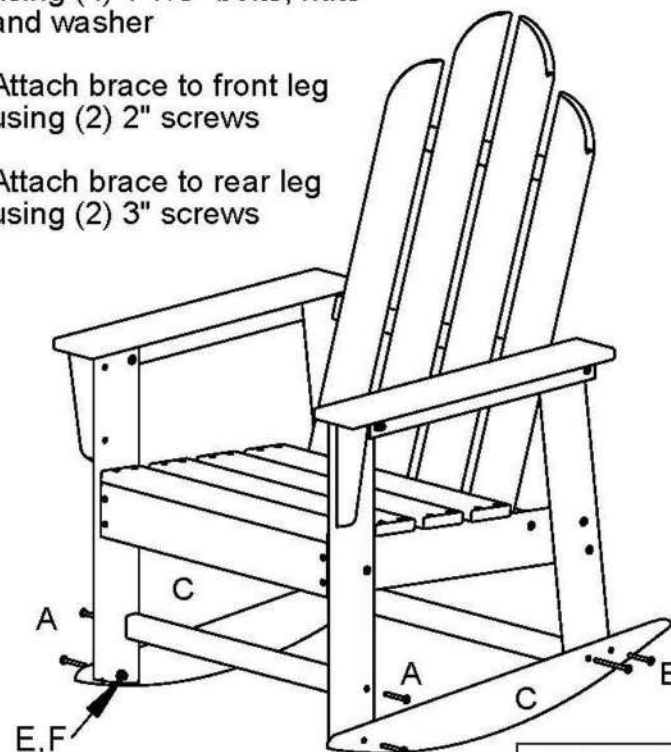

Qty. Description

4 A-27 X 2 SOCKET WAFER A

4 B-27 X 3 SOCKET WAFER A

10 C-1/4-20 X 1-7/8 WAFER SHCS

2 D-1/4-20 X 2-1/4 WAFER SHCS

12 E-1/4 FLAT WASHER

12 F-1/4-20 NYLOCK NUT

ASSEMBLY INSTRUCTIONS

FURNITURE LEISURE INC

1.800.213.2401

www.FurnitureLeisure.com
www.PicnicFurniture.com
www.ParkTables.com

www.PoolFurnitureSupply.com
www.PicnicTableSupplier.com
www.UBrace.com

11/28/2012

ECR16 - Long Island Rocking Chair [32 lbs]

