


ASSEMBLY AND MOUNTING INSTRUCTIONS – FORESITE DESIGNS  
 5 FOOT TABLE, PARK SCAPE DESIGN 160001 AND 160002  
 PAGE 1

ASSEMBLY INSTRUCTIONS: TABLE 5 FOOT LENGTH 160001, 160002

1. Unpack and lay out pieces to assemble. Verify that the parts, quantity, and dimensions match those on the enclosed bill of material.
2. Begin by placing two bull nose boards down on the ground or work area with curved side facing away from each other. Place the two rectangular boards between the two bull nose boards. Begin with one bull nose board and use other boards as working shims.
3. Place one weldment with plate having 16 drilled holes down against the boards and locate plate at a distance of 8 1/4 inches from plate side edge to end of bull nose and at a distance of 6 1/16 inches from plate end edge to flat side of bull nose. Use a hand square to line up plate on the bull nose surface. See diagram 1.
4. Drill 5/32 diameter pilot hole (four places) into the board and install four 1/4 x 2 screws into the board. (use end 4 holes in metal plate of weldment as a drill guide)
5. Place the other weldment with plate having 16 drilled holes down against the board and locate at a distance of 48 1/4 inches from plate side edge to same end of bull nose used in step 4 and at a distance of 6 1/16 inches from plate end edge to flat side of bull nose. Use a hand square to line up plate on the bull nose surface. See diagram 1.
6. Drill 5/32 diameter pilot hole (four places) into the board and install four 1/4 x 2 screws into the board. (use end 4 holes in metal plate of weldment as a drill guide)
7. Locate one rectangular board at a distance of 8 1/4 inches from plate side edge to end of board and at a distance of 15 inches from extreme curved side of secured bull nose at both ends of rect. board. (Ref. 3/8 inch gap between sides of boards at each end.) See diagram 1.
8. Drill 5/32 diameter pilot hole (eight places) into the board and install eight 1/4 x 2 screws into the board. (use second line of 4 holes in metal plate of weldment as a drill guide)
9. Locate second rectangular board at a distance of 8 1/4 inches from plate side edge to end of board and at a distance of 22 3/4 inches from extreme curved side of secured bull nose at both ends of rectangular board. (Ref. 3/8 inch gap between sides of rectangular boards at each end.)
10. Drill 5/32 diameter pilot hole (eight places) into the board and install eight 1/4 x 2 screws into the board. (use third line of 4 holes in metal plate of weldment as a drill guide)
11. Locate second bull nose board at a distance of 8 1/4 inches from plate side edge to end of board and at a distance of 30 3/8 inches from extreme curved sides of two bull nose boards at both ends. (Ref. 3/8 inch gap between sides of rectangular boards at each end.)
12. Drill 5/32 diameter pilot hole (eight places) into the board and install eight 1/4 x 2 screws into the board. (use fourth line of 4 holes in metal plate of weldment as a drill guide)
13. Check square ness of seat before tightening screws.

DIAGRAM 1: TABLE 5 FOOT LENGTH SURFACE 160001 SHOWN

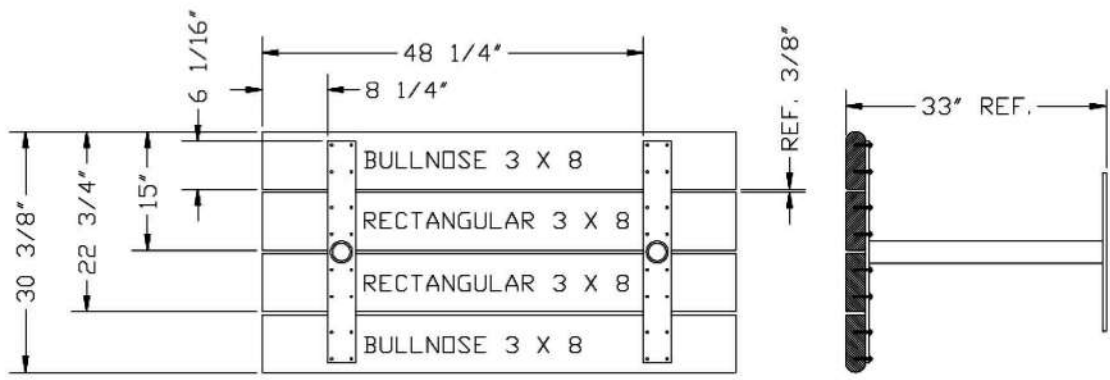

ASSEMBLY AND MOUNTING INSTRUCTIONS – FORESITE DESIGNS  
5 FOOT TABLE, PARK SCAPE DESIGN 160001 AND 160002  
PAGE 2

MOUNTING INSTRUCTIONS: TABLE 5 FOOT LENGTH 160001, 160002

1. Surface mount table 160001 mounts with ½ inch anchors into concrete surface at dimensions as shown on diagram 2.
2. Embedded mount table 160002 mounts by setting in filled holes at dimensions as shown on diagram 2.

DIAGRAM 2: TABLE 5 FOOT LENGTH, SHOWN ARE  
SURFACE 160001 CONCRETE ANCHORS 4 PLACES  
EMBEDDED 160002 FILLED HOLES 2 PLACES

